



With Rockler hardware and simple techniques, you can add style and storage to your space.

# ROLLING OTTOMAN

## GET FROM ROCKLER

Stock #	Item
42318	#8 x 1½" Recex Combination Recess Screws, Zinc
42315	#8 x 1¼" Recex Screws, Zinc
70565	Decorative Washers - Nickel (2 pks.)
46591	40 lb. Torsion Hinges (1 pk. of 2)
46252	60 lb. Torsion Hinge
90192	Black Leather Handle (2)
20839	Pinned Loops - Nickel (2 pks.)
30628	Skate Wheel Caster, Grey
37931	Large Round Door Bumper Cushions

[www.rockler.com](http://www.rockler.com)  
800-279-4441

## OTHER MATERIALS


- Hardwood lumber:  
3/4" x 5" x 48" (4)\*  
3/4" x 3" x 48" (12)\*  
1¾" x 1¾" x 10" (4)
- MDF or other sheet stock
- Your choice of finish
- Your choice of fabric
- 17¾" x 30¾" x 2" foam

\* Available from Rockler




## 1. CUT THESE PIECES

1/2" THICK MDF or ALTERNATE MATERIAL

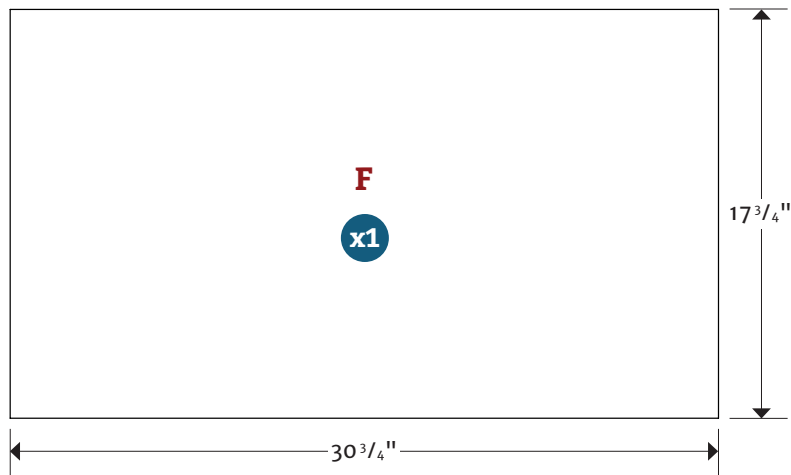


3/4" THICK WHITE OAK or OTHER HARDWOOD

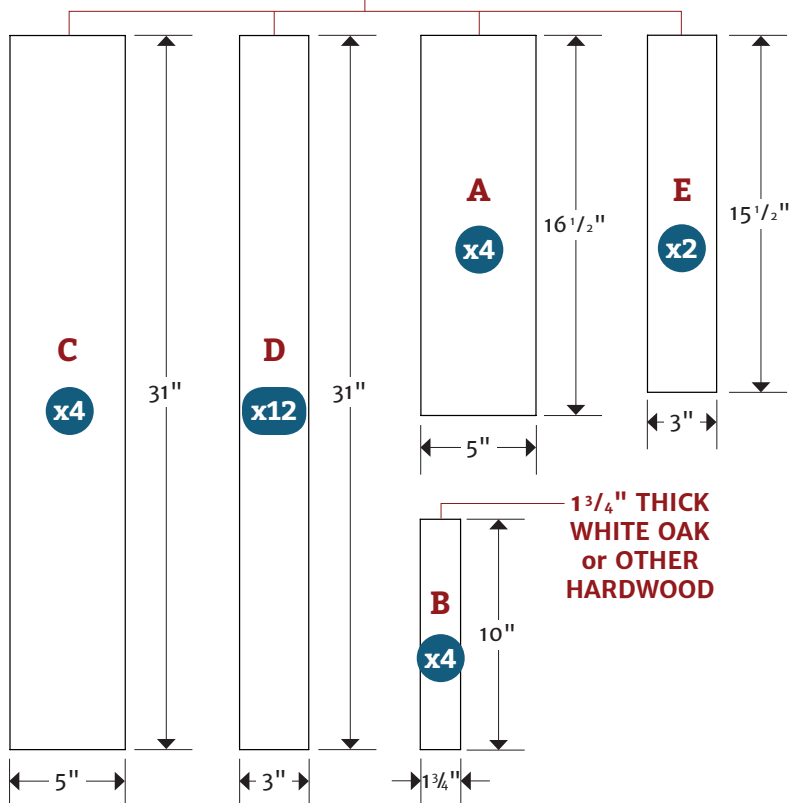

1 3/4" THICK  
WHITE OAK  
or OTHER  
HARDWOOD


## 2. BUILD THE ENDS

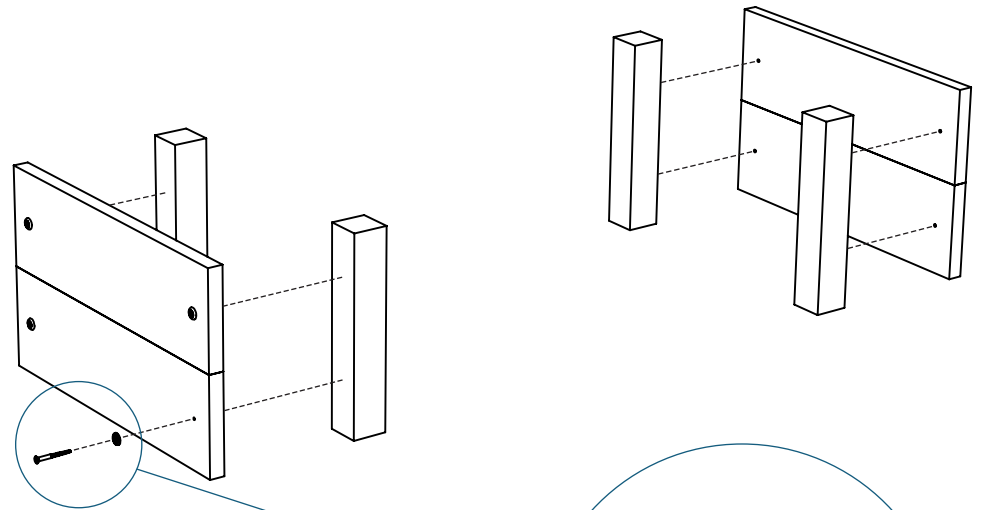

Use #8 x 1 1/2" screws and decorative washers to attach all pieces except for bottom slats.

For bottom slats, use only screws.

Predrill all holes to avoid splitting the wood.

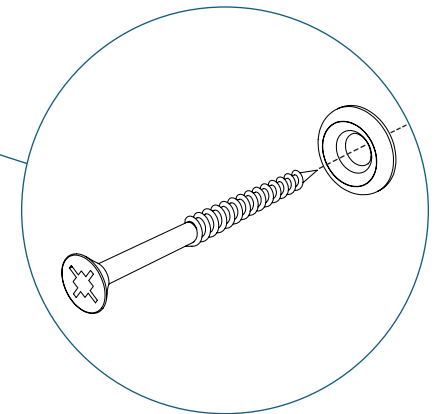


# ROLLING OTTOMAN

Simple construction techniques and signature Rockler hardware provide form and function.




### 3. ADD THE SIDES


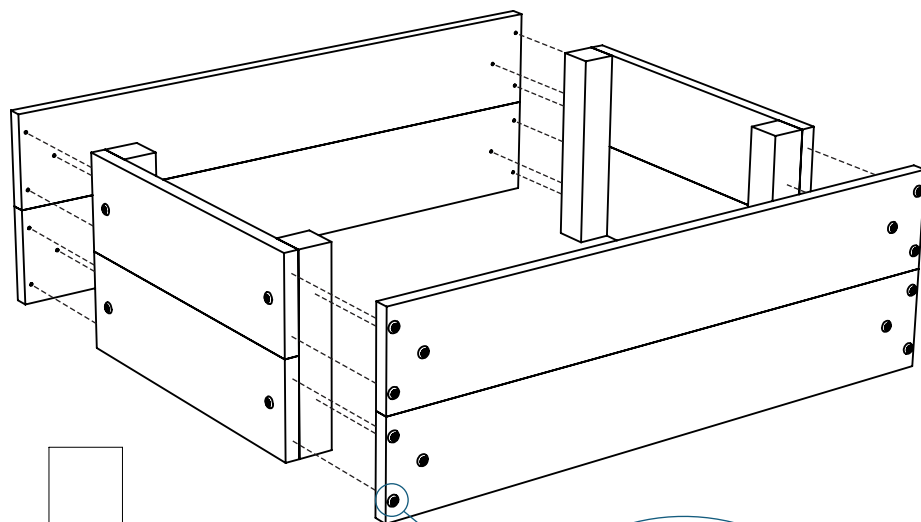


C  
x4

Use #8 x 1 1/2" screws and decorative washers to attach all pieces.  
Predrill all holes to avoid splitting the wood.

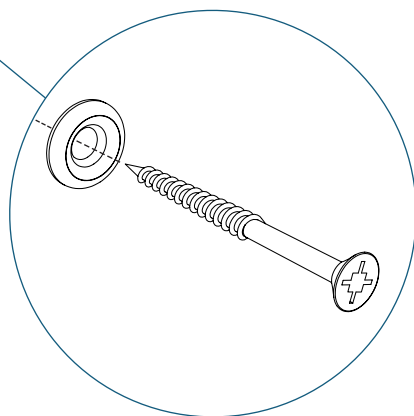


### 4. ATTACH THE BOTTOM

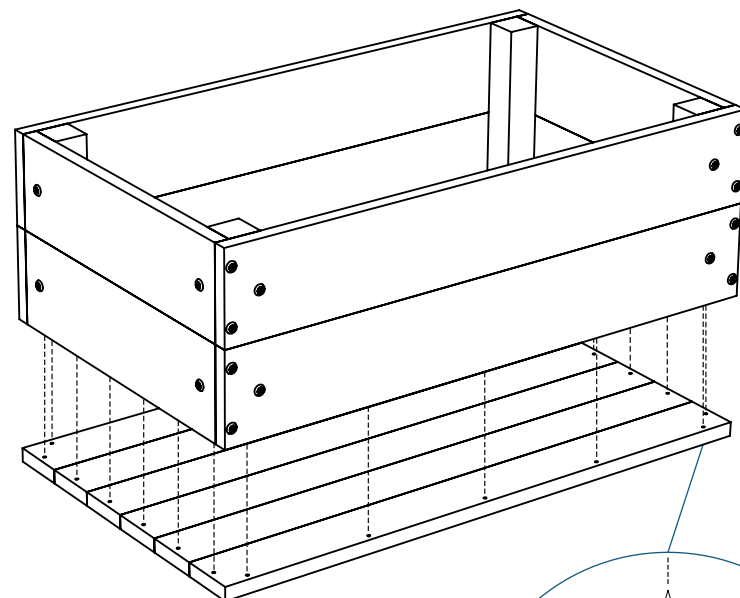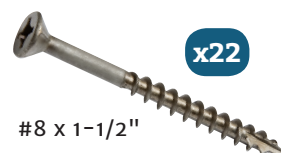

D  
x6

Use #8 x 1 1/2" screws **without** decorative washers to attach bottom slats.

Predrill all holes to avoid splitting the wood.

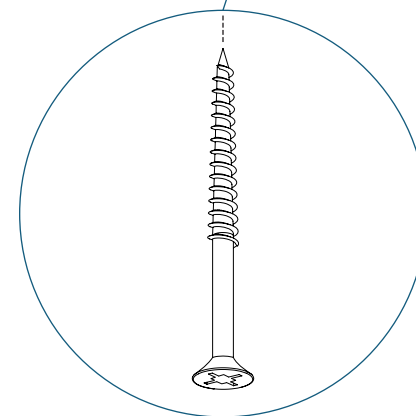



## ROLLING OTTOMAN

Customize with a wood species and fabric that complements the rest of your living space.






## 5. BUILD THE TOP

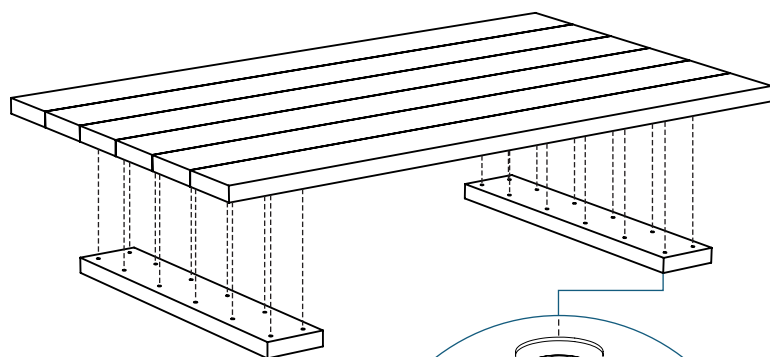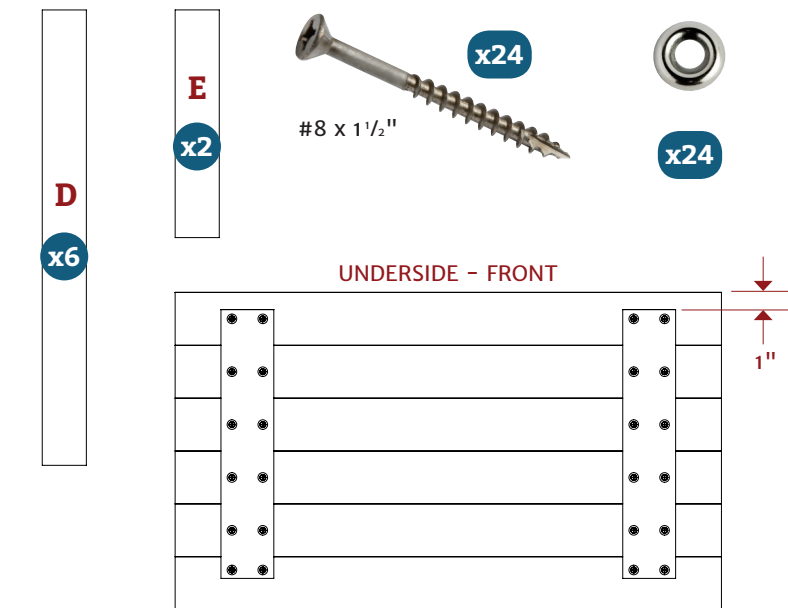


Use #8 x 1 1/2" screws and decorative washers to attach all pieces.




Pre-drill all holes to avoid splitting the wood, but make sure not to drill through top slats.

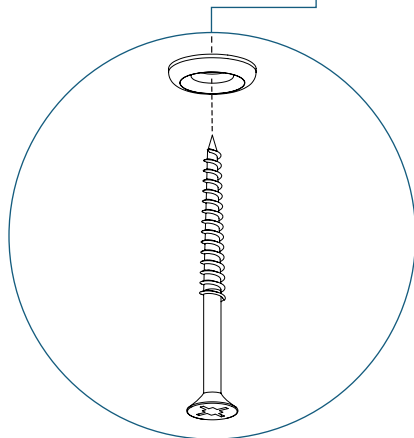

## 6. BRING IT ALL TOGETHER

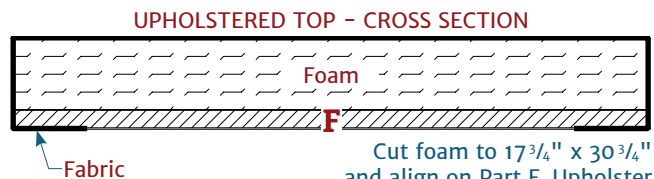

Use #8 x 1 1/4" screws with washers to attach upholstered top.

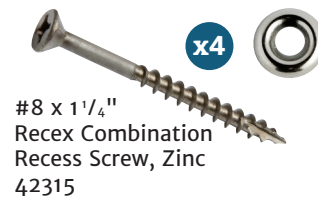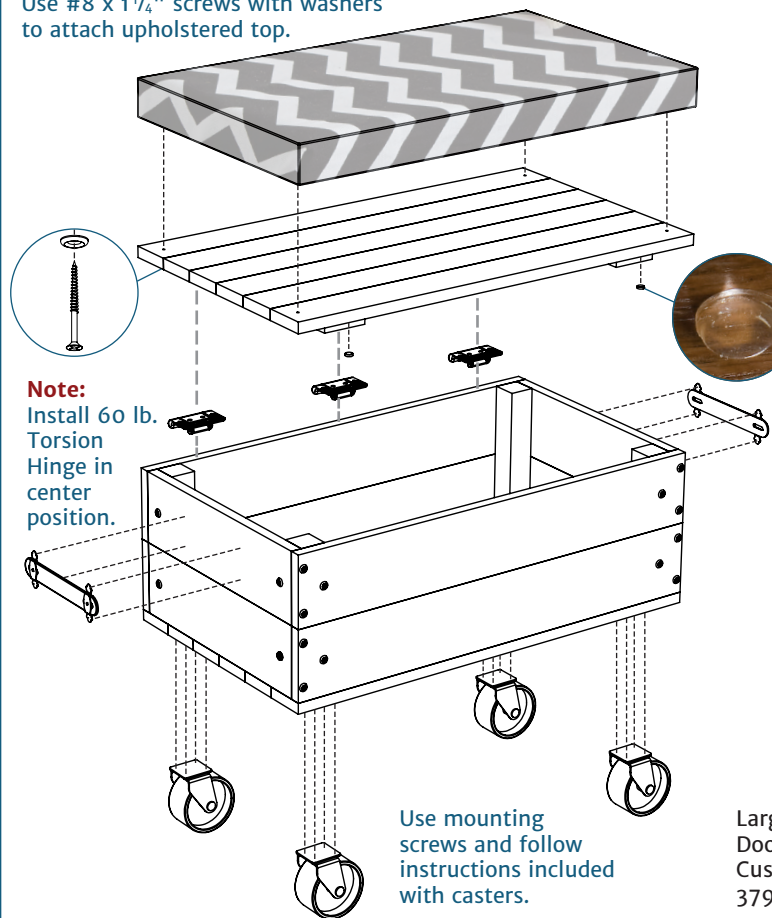

# ROLLING OTTOMAN

Finish off and protect your project with your own choice of stain and/or topcoat.

